

JMI


JOHNSTON MILLWORK, INC.

www.johnstonmillwork.com

837 SECOND AVENUE
REDWOOD CITY, CA 94063

PHONE 650-361-1775
FAX 650-361-1802



ARCHITECTURAL MOULDING CATALOG

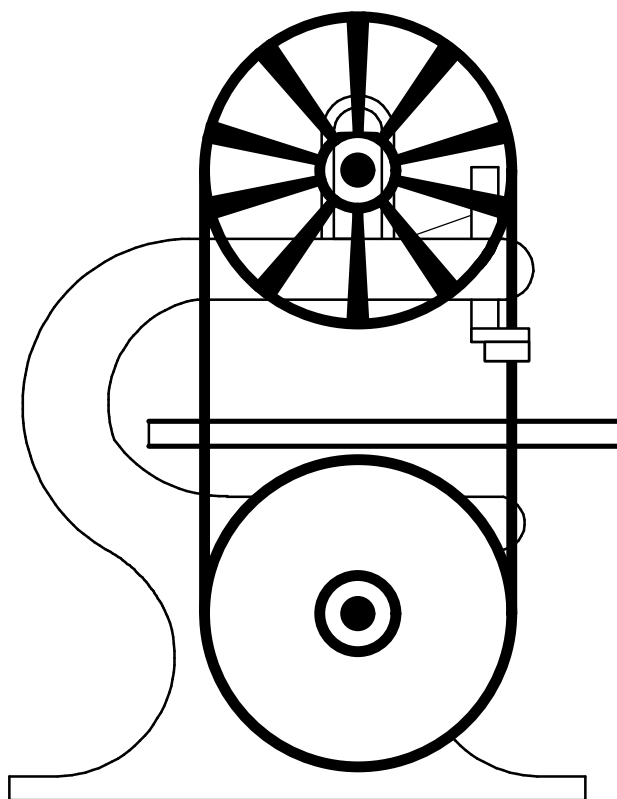

DOORS * WINDOWS * MOULDINGS

DOOR PRODUCTS

- CUSTOM DOORS TO YOUR DESIGN
- MATCH EXISTING
- OVER OR UNDER SIZED
- ARCHED OR RADIUS
- STANDARD

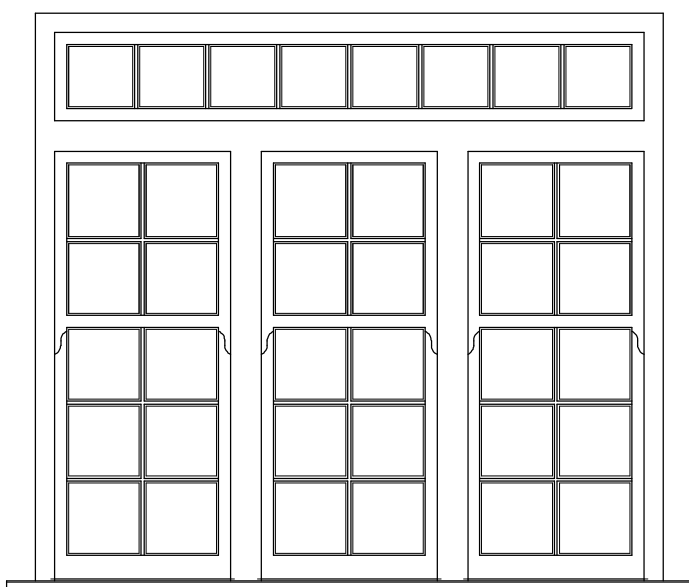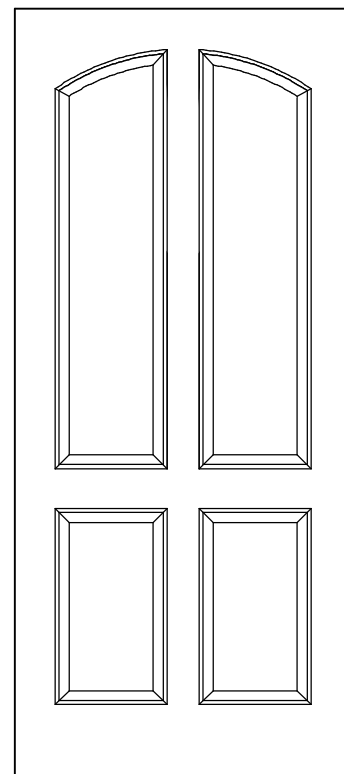


WINDOW PRODUCTS


- MILGARD
- JELD-WEN
- IWC/YELLOW DOG
- CUSTOM WOOD WINDOWS

MOULDING AND OTHER PRODUCTS

- PAINT-GRADE OR STAIN-GRADE TRIM
- CUSTOM RUN TRIM
- COLUMNS
- ATTIC LADDERS

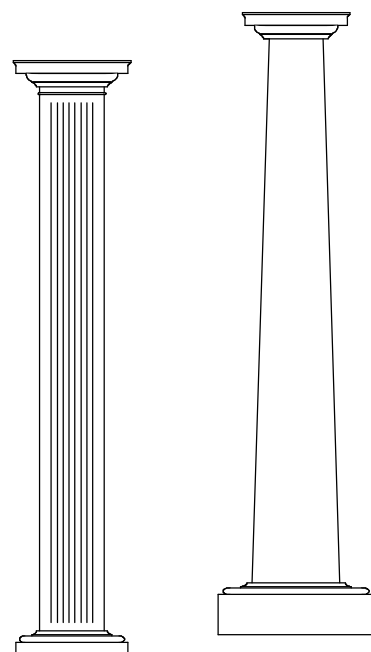

Door & Window Casing

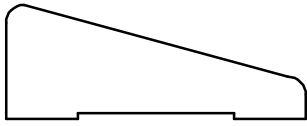


101 - Beveled
5/8 X 1 5/8




102 - Beveled
5/8 X 2 1/4




103 - Moulded
5/8 X 1 5/8

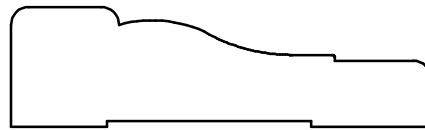

104 - Colonial
5/8 X 2 1/4




105 - Moulded
9/16 X 3 1/4




106 - Riviera
9/16 X 2 1/2

All profiles to scale to the best of our ability

Door & Window Casing

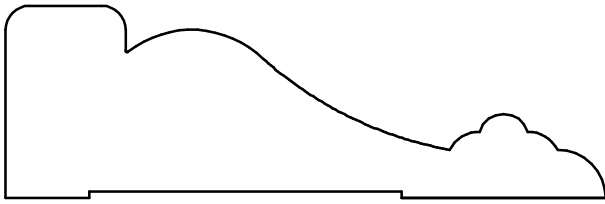


107 - 49er
15/16 X 3 1/4

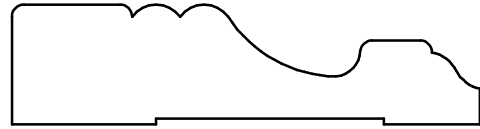


108 - Carolina
5/8 X 2 7/16



109 - Victorian
11/16 X 2 1/2

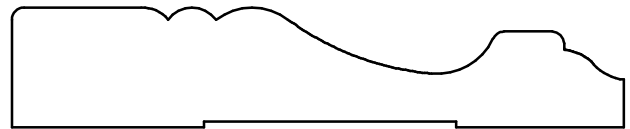

110 - Carolina
11/16 X 3 1/4

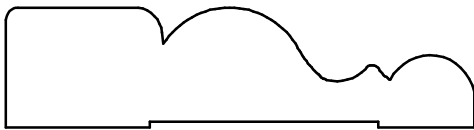


111 - Montana
11/16 X 2 7/16




112 - Shasta
11/16 X 3 7/16


Door & Window Casing

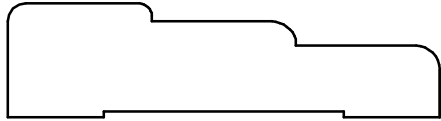


113 - Step
5/8 X 2 1/4

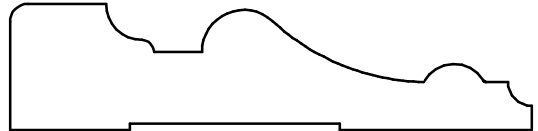

114 - Santa Fe
11/16 X 2 7/16




115 - Round Edge
9/16 X 1 5/8




116 - Round Edge
9/16 X 2 1/4



117 - Round Edge
9/16 X 3 1/4




118 - Oval
9/16 X 1 5/8




119 - Oval
9/16 X 2 1/4


Door & Window Casing

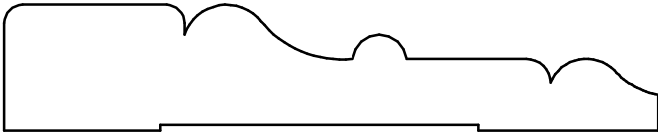

121 - Beaded Colonial
 $\frac{5}{8} \times 3 \frac{3}{8}$

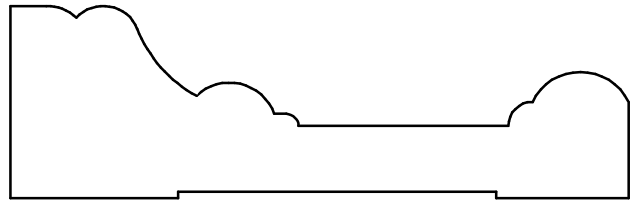


123 - Howe
 $1 \frac{1}{16} \times 3 \frac{1}{4}$

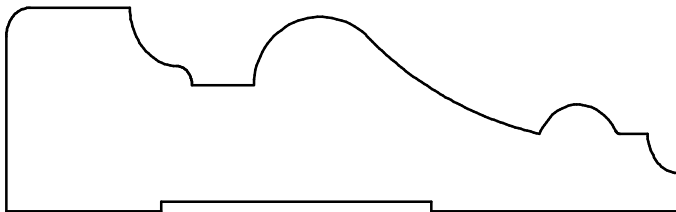


124 - Santa Fe
 $1 \frac{1}{16} \times 3 \frac{1}{2}$



125 - Flute & Reed
 $\frac{5}{8} \times 2 \frac{1}{4}$

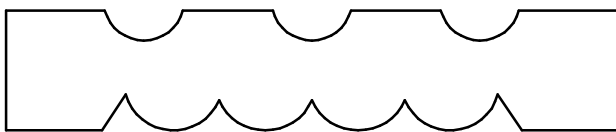


126 - Flute & Reed
 $1 \frac{1}{16} \times 3 \frac{1}{4}$

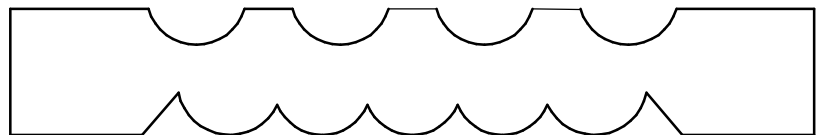


127 - Flute & Reed
 $\frac{5}{8} \times 4 \frac{1}{4}$

Door & Window Casing

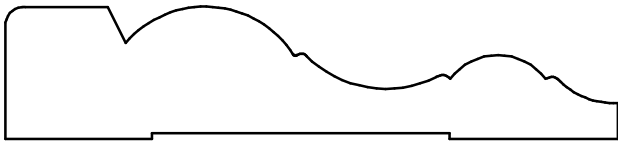


135 - Mission
5/8 X 3 3/16

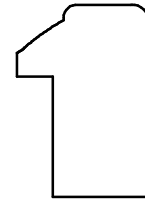


140 - Small Backband
3/4 X 1
Rabbet size: 3/16 X 5/8



191 - Anderson
5/8 X 2 3/16

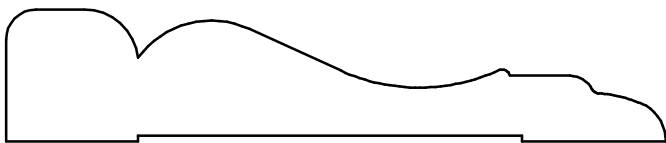

198 - Valley
11/16 X 3 1/2

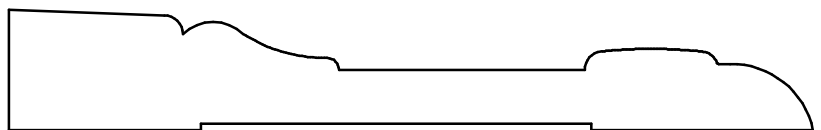





199 - Coronado
5/8 X 4 1/4

Plinth Block & Corner Block

Plinth Blocks

Large: $1 \frac{1}{16} \times 4 \frac{1}{2} \times 8$

Small: $1 \frac{1}{16} \times 3 \frac{1}{2} \times 6 \frac{1}{2}$

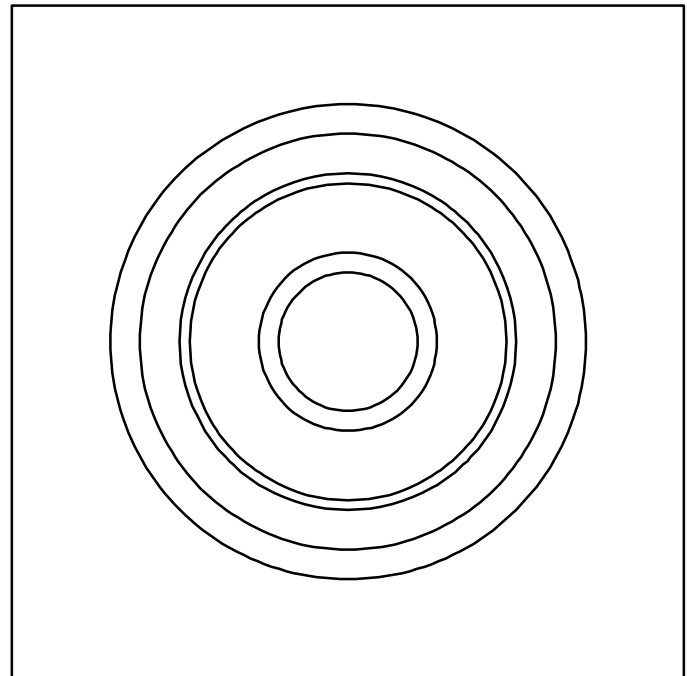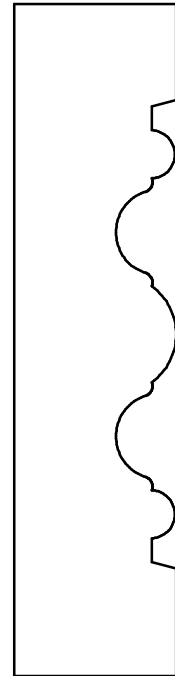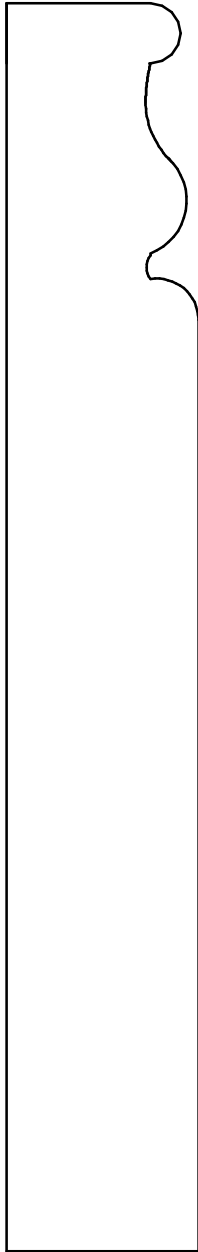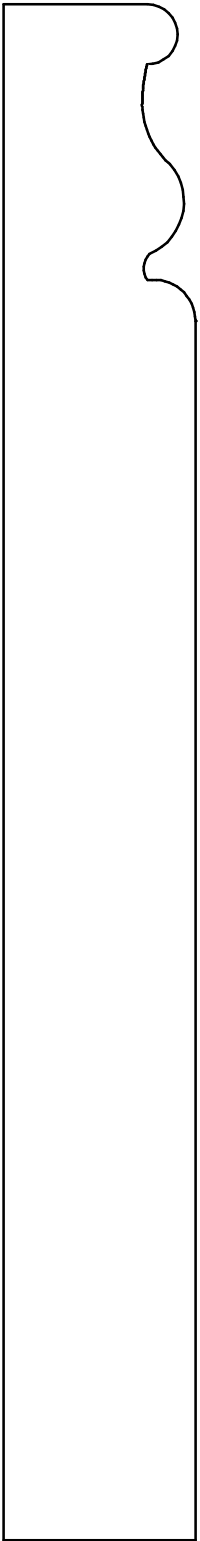

Square Edge Bullseye Blocks

Large: $27/32 \times 4 \frac{1}{2}$

Medium: $27/32 \times 3 \frac{1}{2}$

Small: $3/4 \times 2 \frac{1}{2}$


Baseboard



201 - Reversible
5/16 X 2 1/4




202 - Reversible
5/16 X 3 1/4



203 - Hook
1/2 X 3 3/16




204 - Coronado
1/2 X 3 1/4



205 - Coronado
1/2 X 4 1/4

Baseboard




206 - Peninsula
 $\frac{1}{2} \times 3 \frac{1}{4}$




207 - Coronado
 $\frac{1}{2} \times 5 \frac{1}{4}$



208 - Peninsula
 $\frac{1}{2} \times 5 \frac{1}{4}$



209 - Riviera
 $\frac{1}{2} \times 3 \frac{3}{16}$



210 - Edgewood
 $\frac{1}{2} \times 3 \frac{1}{4}$


Baseboard



211 - Edgewood
 $\frac{1}{2} \times 5 \frac{3}{16}$



213 - Round Edge
 $\frac{1}{2} \times 5 \frac{7}{16}$

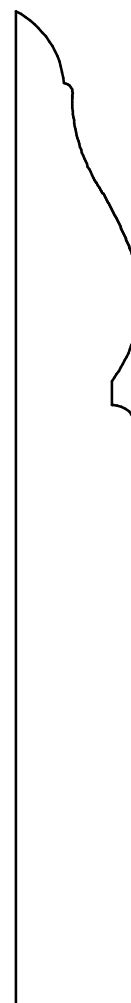

214 - Victorian
 $\frac{5}{8} \times 5 \frac{1}{8}$




215 - Carolina
 $\frac{5}{8} \times 4 \frac{9}{16}$



230 - Santa Fe
 $\frac{1}{2} \times 3 \frac{7}{16}$

Baseboard



231 - Santa Fe
 $\frac{1}{2} \times 4 \frac{1}{2}$




232 - Santa Fe
 $\frac{1}{2} \times 5 \frac{7}{16}$




235 - Lombard
 $\frac{5}{8} \times 5 \frac{1}{4}$


Crown

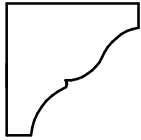


300 - Crown
 $\frac{3}{4} \times \frac{3}{4}$

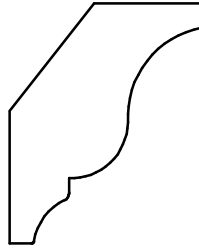


301 - Crown
 $\frac{1}{2} \times 1 \frac{5}{8}$

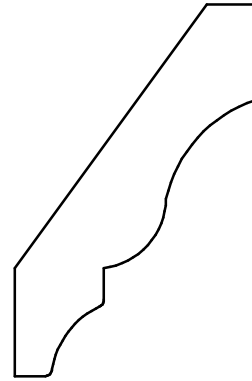


302 - Crown
 $\frac{1}{2} \times 2 \frac{1}{4}$

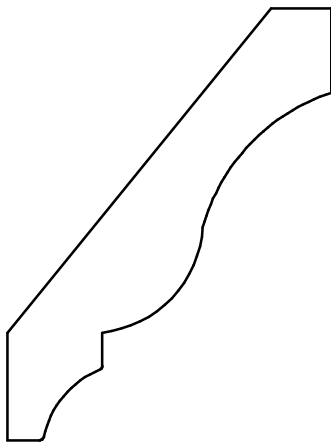

303 - Crown
 $\frac{9}{16} \times 2 \frac{3}{4}$

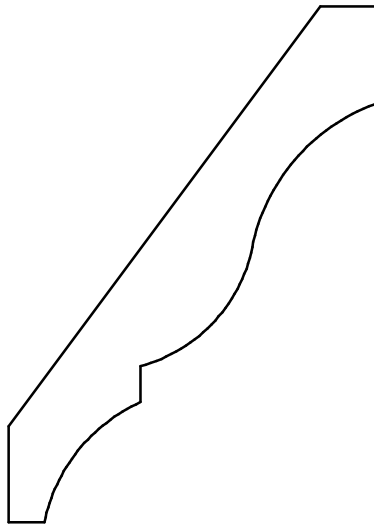


304 - Crown
 $\frac{5}{8} \times 3 \frac{1}{4}$

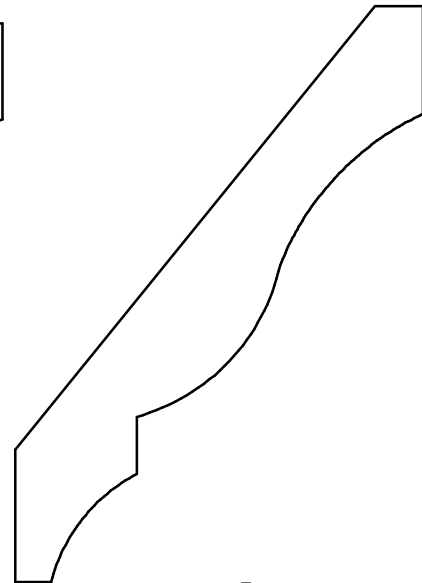


358 - Crown
 $\frac{9}{16} \times 3 \frac{5}{8}$

Crown

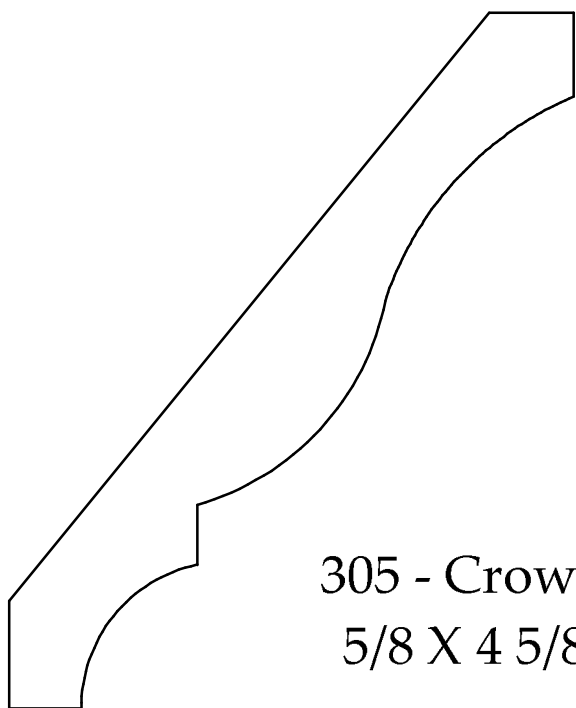

305 - Crown
5/8 X 4 5/8

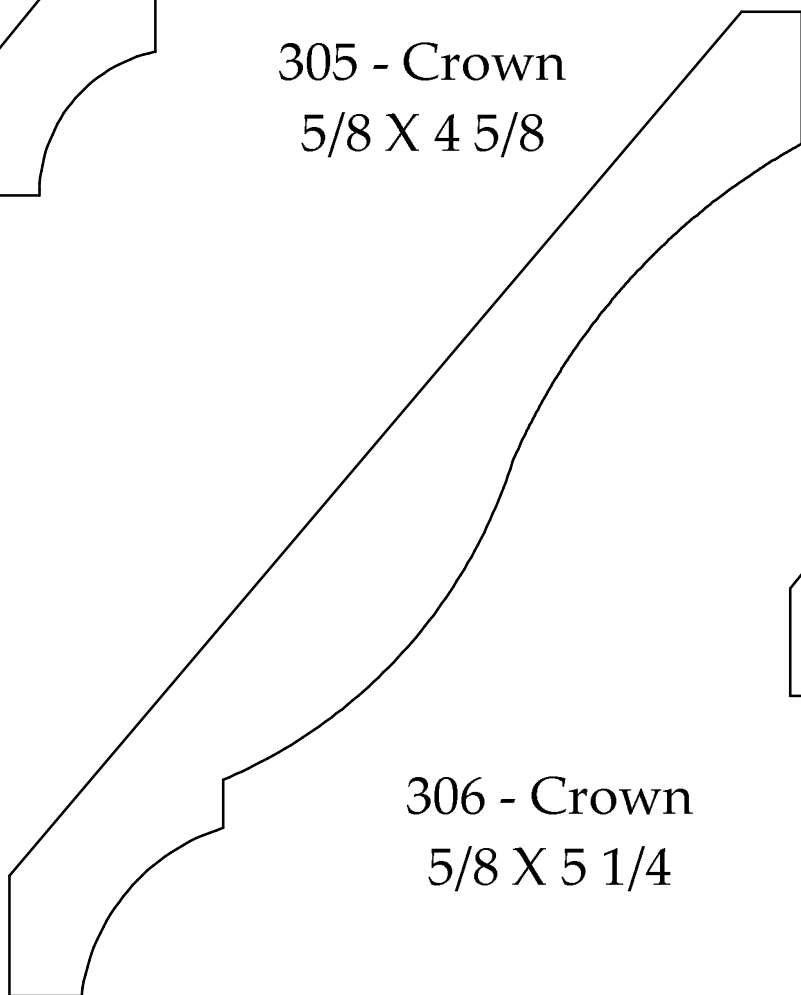


306 - Crown
5/8 X 5 1/4




345 - Colonial
Revival Crown
3/4 X 4 9/16

Crown


307 - Crown
7/8 X 6 1/4

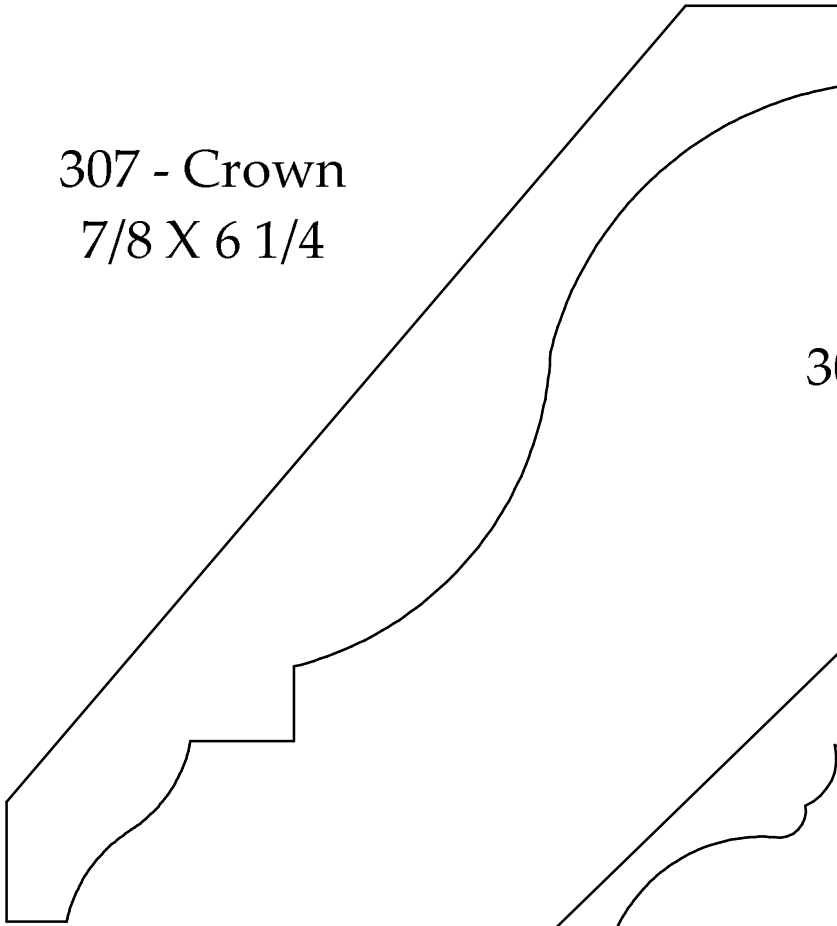

308 - Coronado Crown
5/8 X 4 3/8

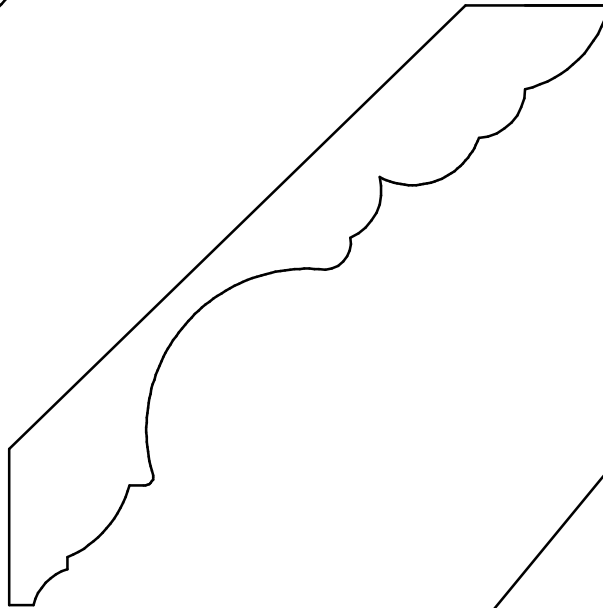


309 - Colonial Crown
1 1/8 X 4 5/16

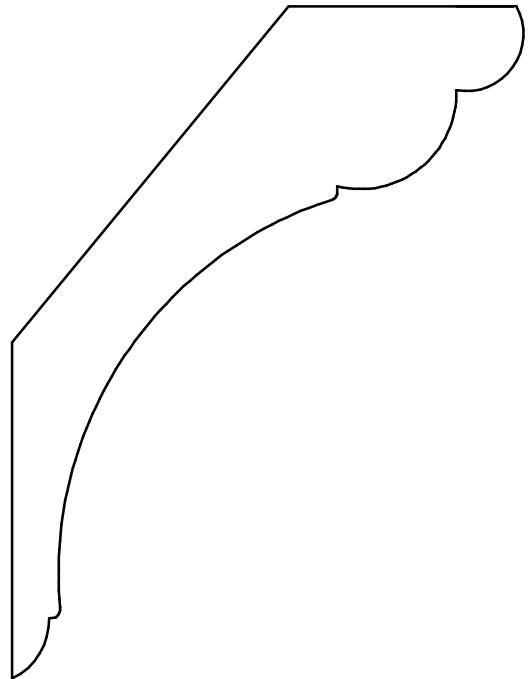

Crown



310 - Cornice Crown

1 1/4 X 5 7/8

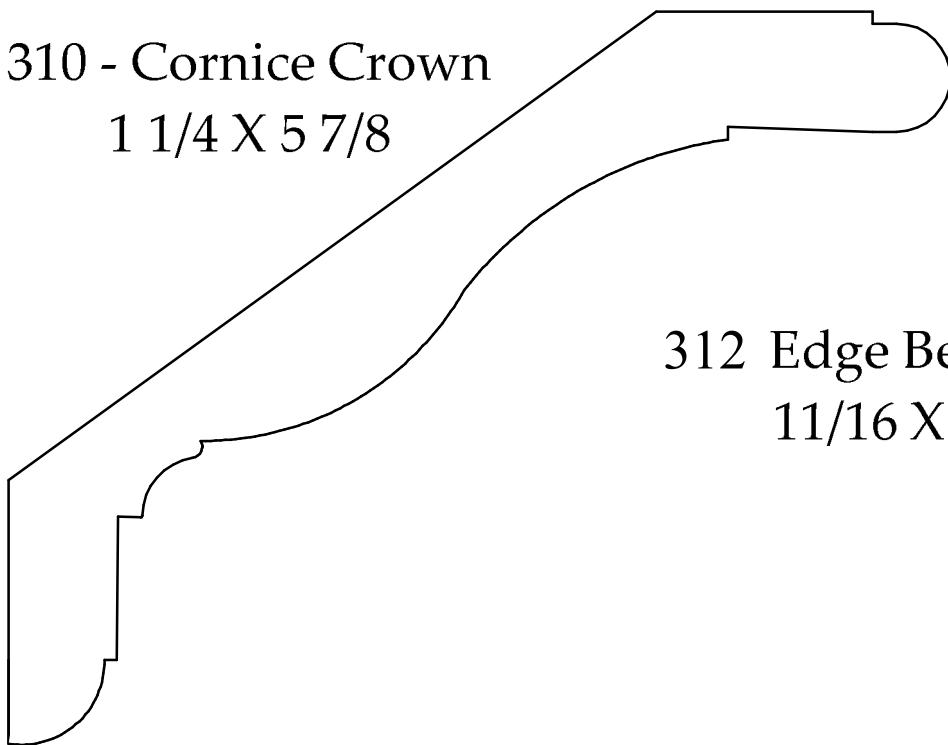


312 Edge Bead Crown

11/16 X 3 1/8

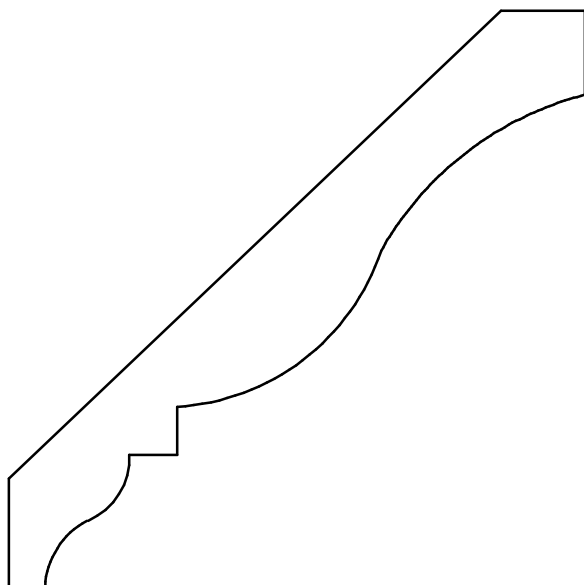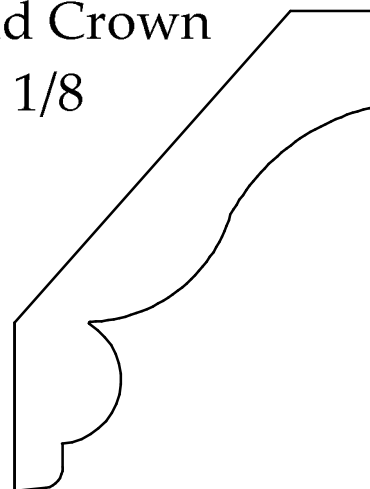

318 - Crown


9/16 X 4 1/8

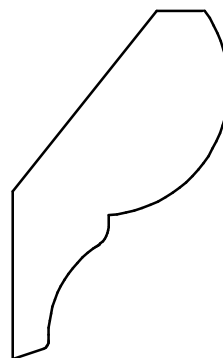

323 - Bed Moulding

11/16 X 2


Crown

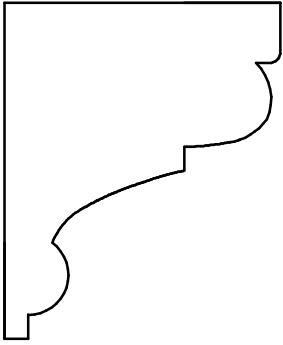


330 - Bed Moulding
1 3/8 X 1 3/4



335 - Single Bead Crown
5/8 X 3 1/4

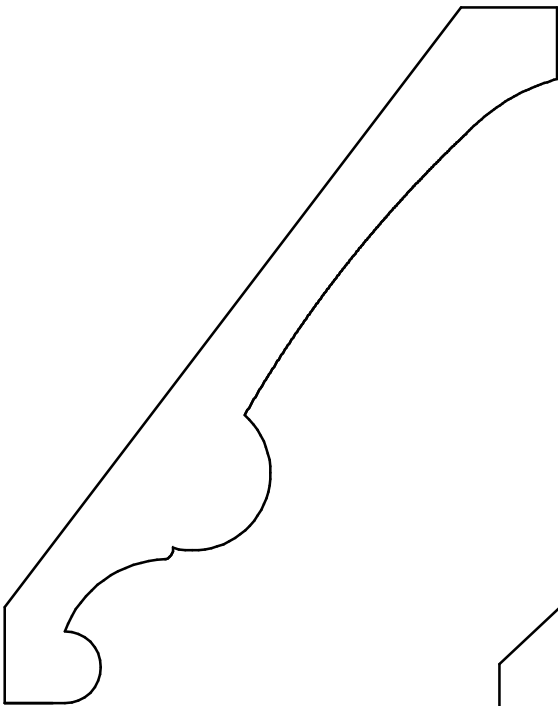


336 - Single Bead Crown
11/16 X 4 9/16

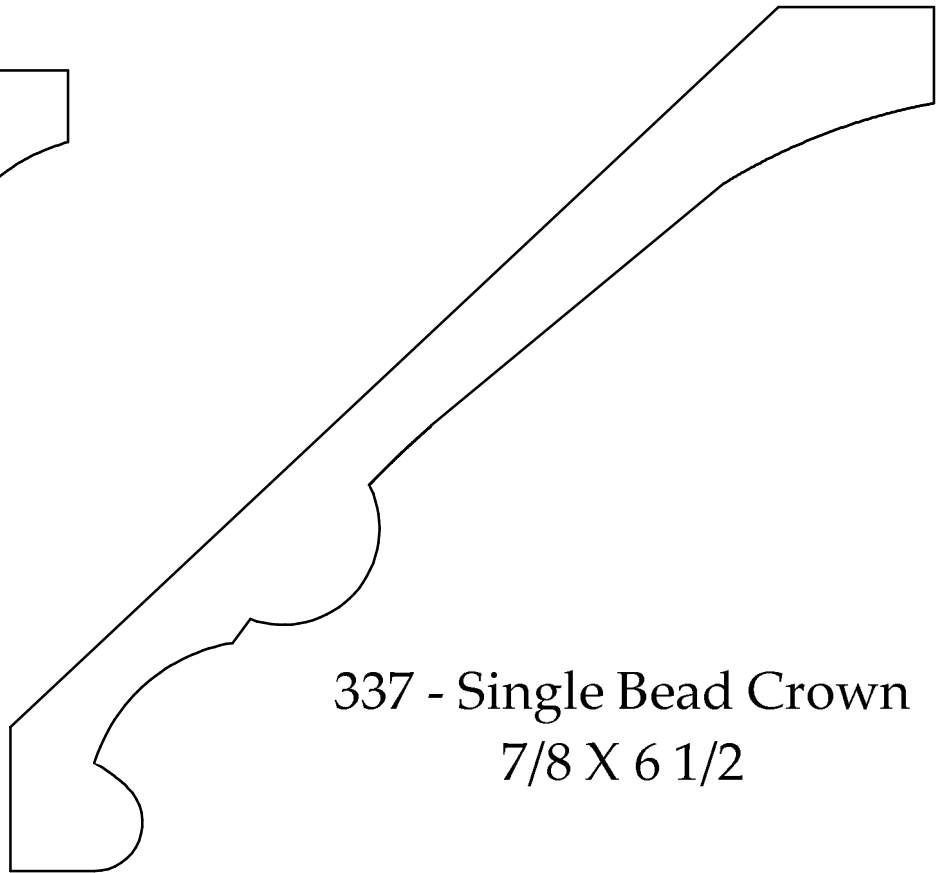


337 - Single Bead Crown
7/8 X 6 1/2


Crown

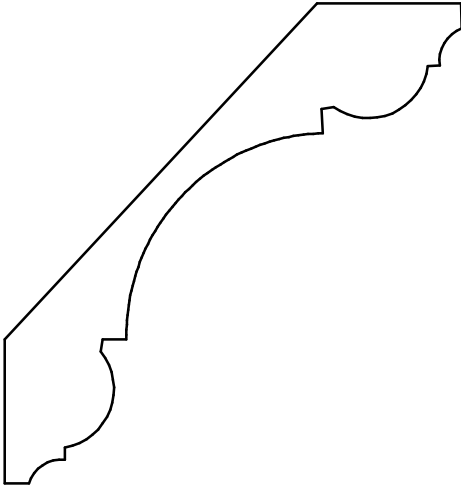

340 - Double Bead Crown
 $\frac{5}{8} \times 3 \frac{3}{8}$

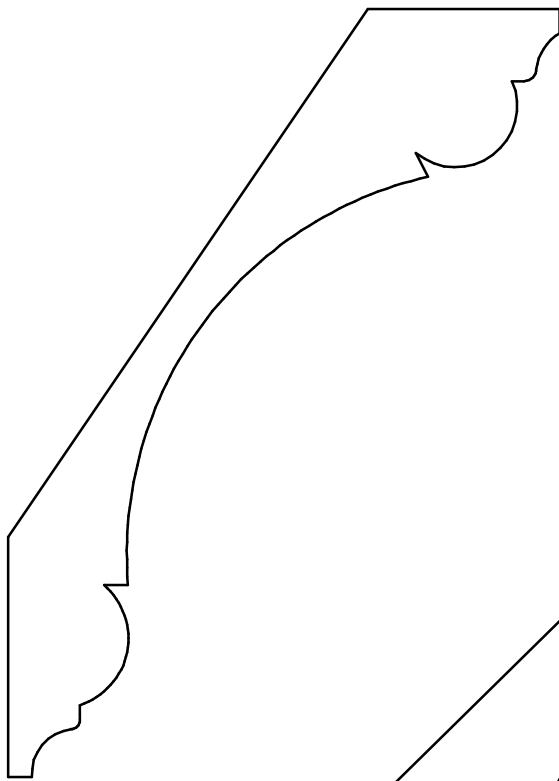


341 - Double Bead Crown
 $\frac{7}{8} \times 4 \frac{15}{16}$

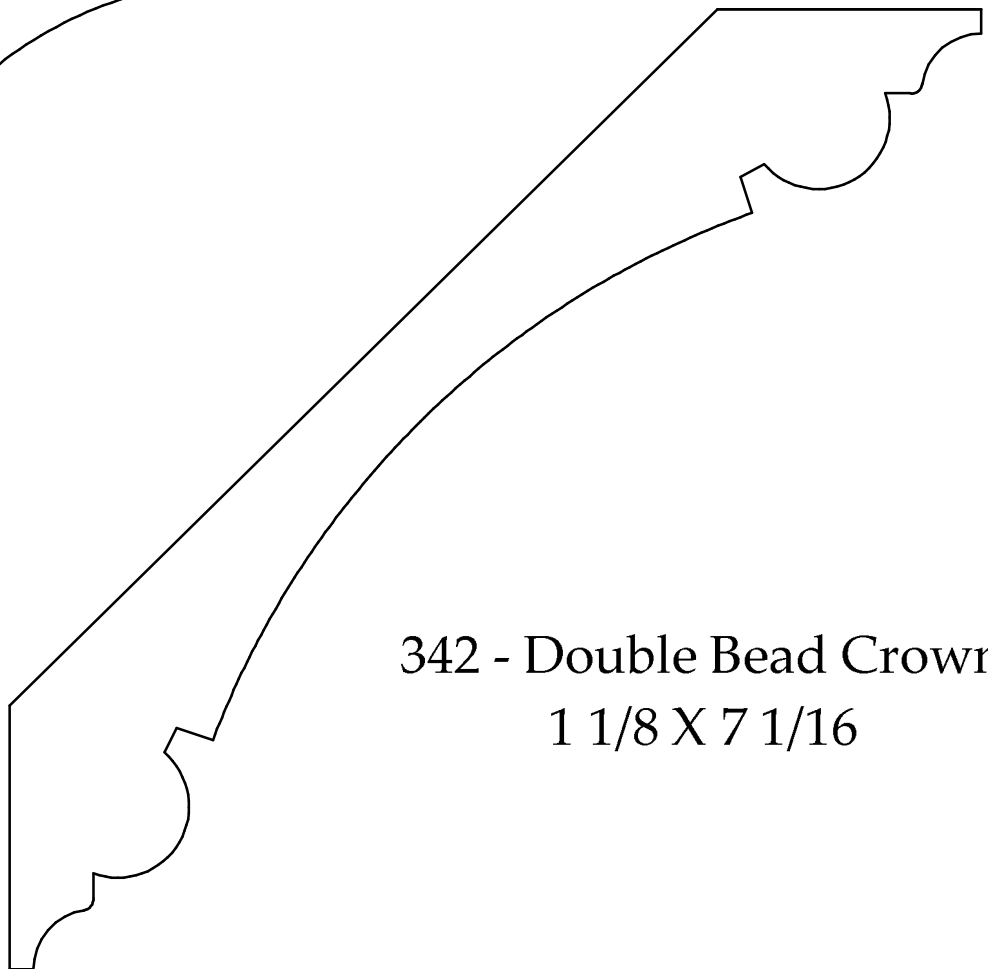


342 - Double Bead Crown
 $1 \frac{1}{8} \times 7 \frac{1}{16}$


Chair Rail

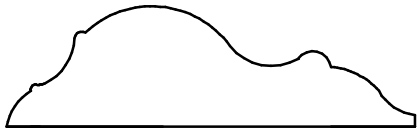

402
11/16 X 2 1/8

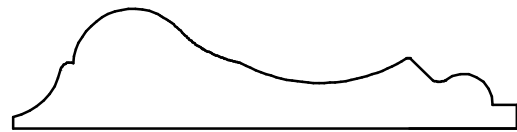

404
11/16 X 2 5/8

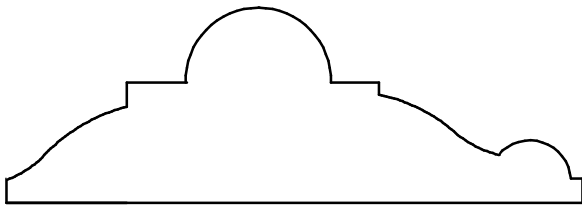

407
1 X 3



408
9/16 X 2




501
9/16 X 3/4



503
5/8 X 1 3/8


Applied Moulding



511


$9/16 \times 1 \frac{1}{8}$

Rabbet size: $1/4 \times 3/4$

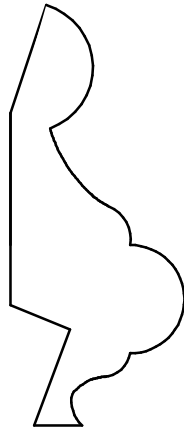

513


$3/4 \times 2 \frac{1}{8}$

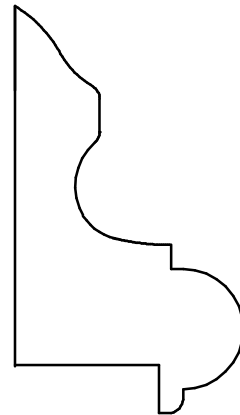

525

$1 \frac{3}{16} \times 2 \frac{3}{16}$


Rabbet size: $1/4 \times 3/4$

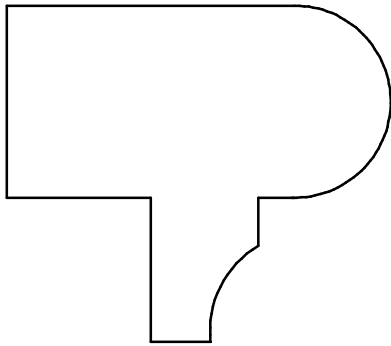

526

$1 \frac{3}{4} \times 1 \frac{3}{4}$

Rabbet size: $3/4 \times 3/4$

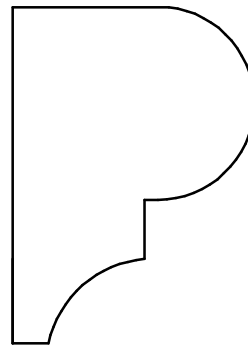


527

$1 \frac{1}{4} \times 1 \frac{3}{4}$


Applied Moulding




534
 $3/8 \times 3/4$

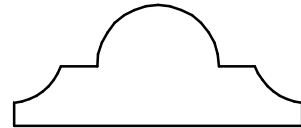


535
 $5/8 \times 1 \frac{7}{16}$

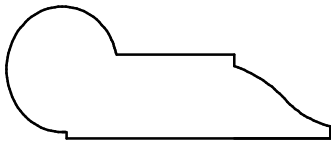

580
 $11/16 \times 1 \frac{3}{4}$



603
 $1/2 \times 1/2$

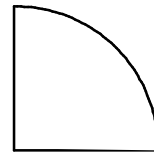

604
 $3/4 \times 3/4$




607
 $3/8 \times 3/4$




631
 $1/2 \times 3/4$


Corner & Cove Mould

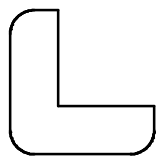


613
3/4 X 3/4

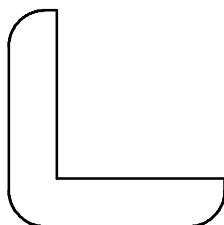


614
1 1/8 X 1 1/8

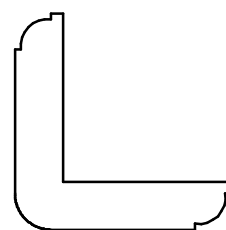


615
1 1/8 X 1 1/8

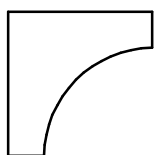

621 - Cove
11/16 x 11/16

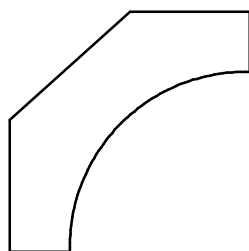


625 - Cove
5/8 x 1 3/4

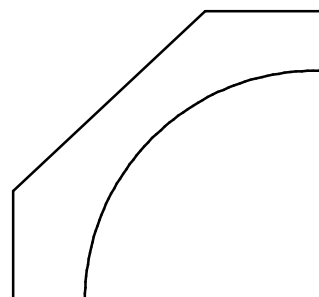

626 - Cove
5/8 x 2 1/4

Miscellaneous Mould




632 - Flat Screen Mould
 $\frac{1}{4} \times \frac{3}{4}$



633 - Beaded Screen Mould
 $\frac{1}{4} \times \frac{3}{4}$




634 - Parting Bead
 $\frac{3}{8} \times \frac{3}{4}$




641 - Round Edge Door Stop
 $\frac{3}{8} \times 1 \frac{3}{8}$



643 - Colonial Door Stop
 $\frac{7}{16} \times 1 \frac{3}{8}$

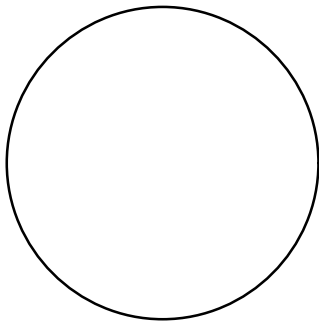


$1 \frac{3}{8}$ Pole



Cleat $\frac{1}{2} \times 1 \frac{1}{2}$


Window Stool

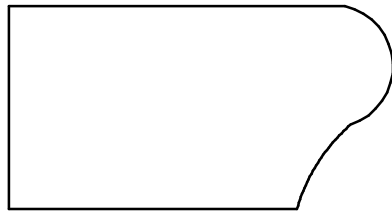

702
1 1/8 X 2



701
5/8 X 5 1/8

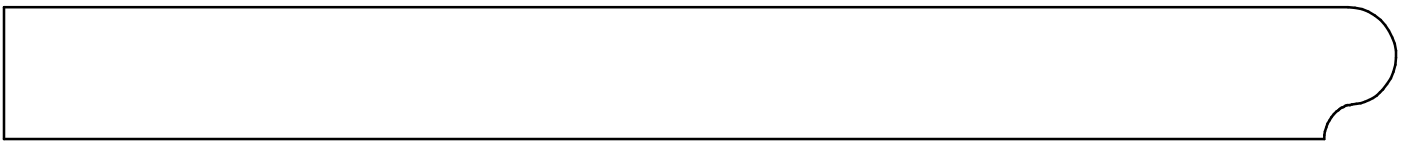


703
5/8 X 7 3/16




704
5/8 X 4 5/8


Miscellaneous Mould & Astragal

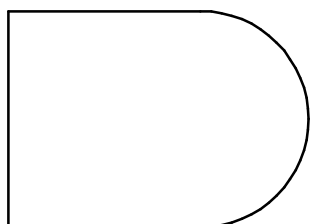

705 - Nosing
1 1/8 X 1 7/16




722 - Reversible T & G Wainscot
1/2 X 3 1/4

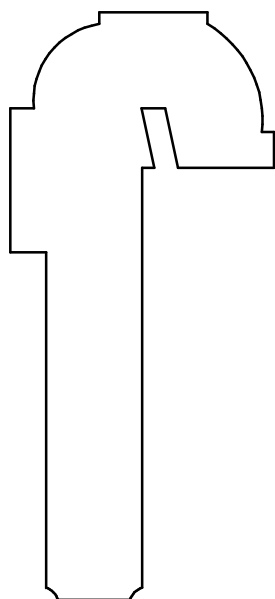

1/2

Weatherstripped Astragal

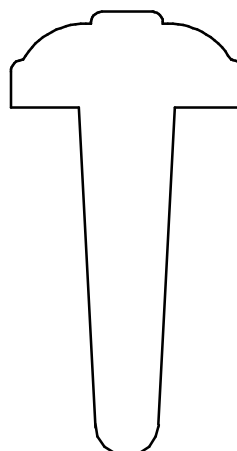


3/8


Standard Astragal

Exterior Treated Moulding


Brick Mould
2 x 1 1/4

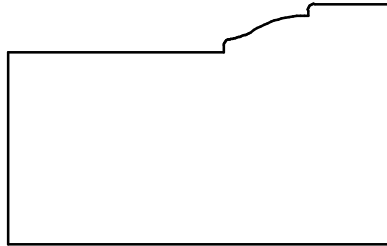


Brick Mould w/Key
2 x 1 1/4

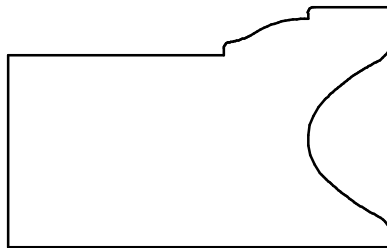


Small Stucco Mould
1 1/2 x 3/4

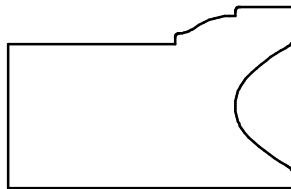

Large Stucco Mould
2 1/2 x 1

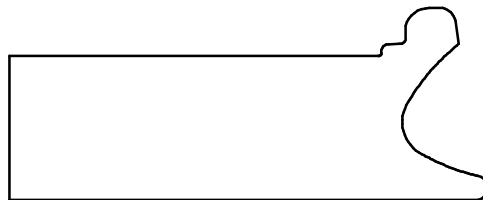

Interior Jamb

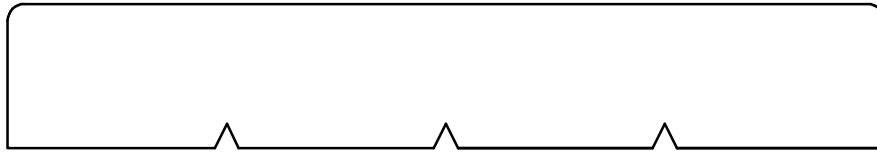

1602 - Interior Door Jamb
5/8 X 4 9/16



1603 - Interior Door Jamb
5/8 X 4 3/4




1604 - Interior Door Jamb
5/8 X 5 1/4




1605 - Interior Door Jamb
5/8 X 7 1/4

Exterior Jamb & Sill

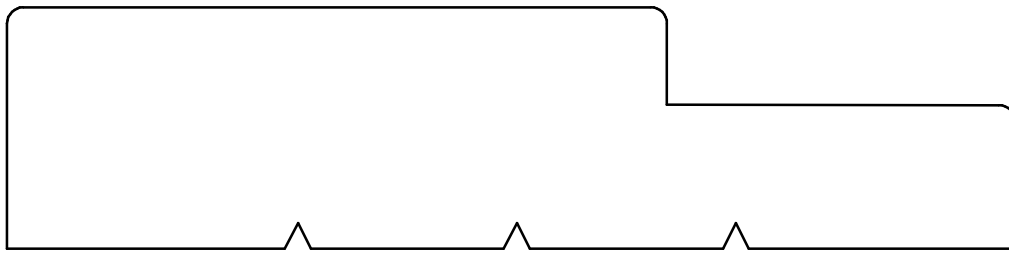

1606 - Exterior Door Jamb

1 3/16 X 5 1/4

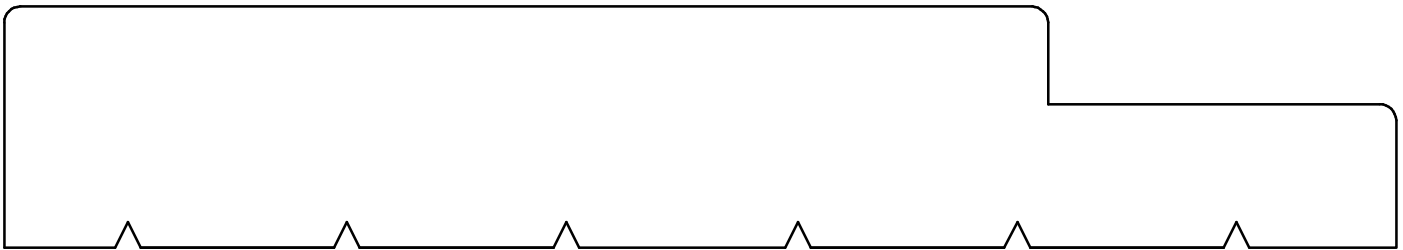


1607 - Exterior Door Jamb

1 3/16 X 7 1/4



801 - Oak Sill

1 X 7 1/4

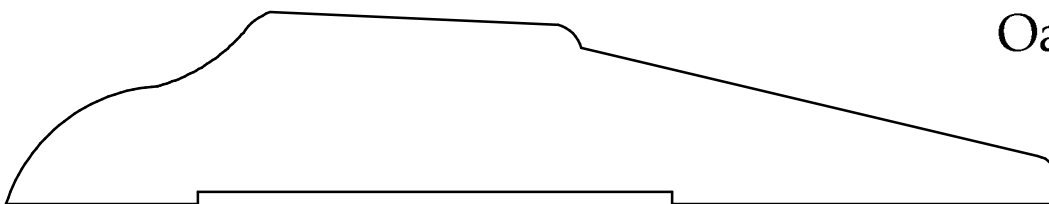

Oak Sill Threshold


5 1/2 X 1




Oak Sill Threshold

4 5/8 x 3/4


Watertable

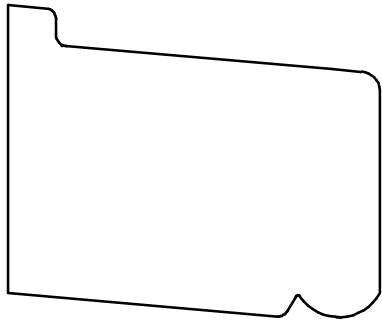


Small Watertable
1 3/8 X 1 7/8

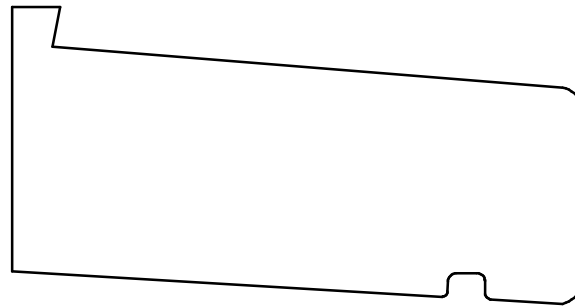

Large Watertable
1 7/16 X 3

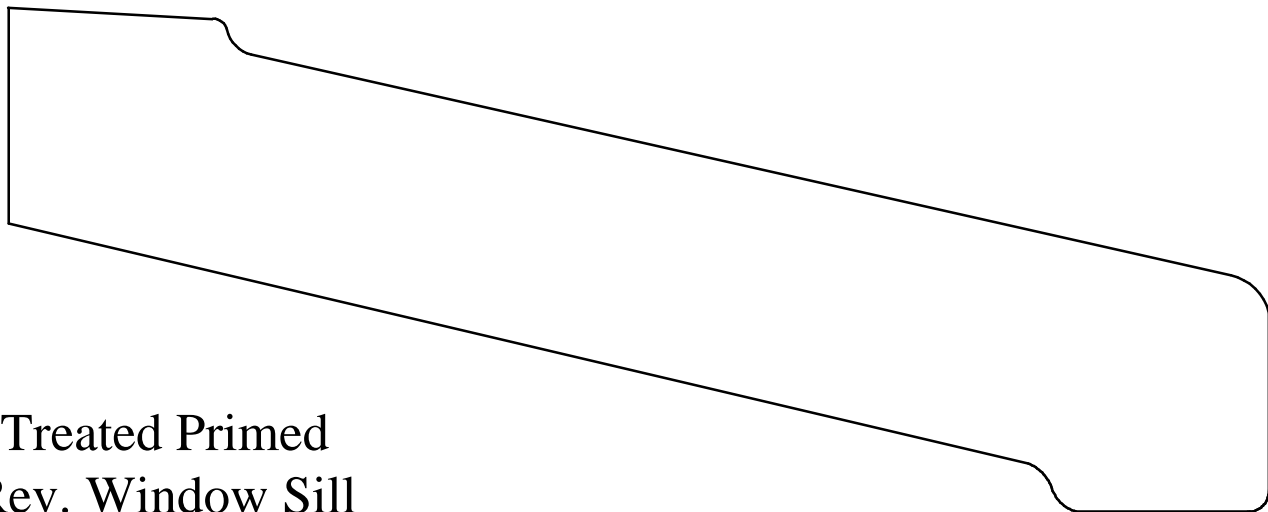



Treated Primed
Rev. Window Sill
1 1/4 x 6 5/8

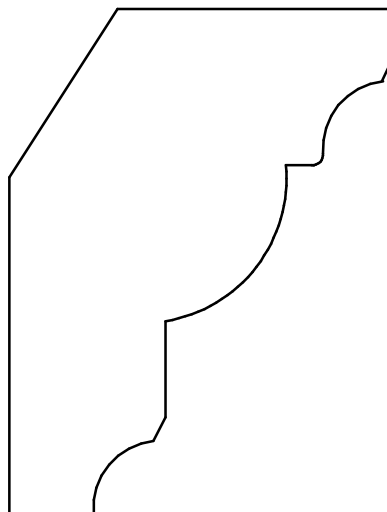

Treated Primed
Gutter Mould
1 3/8 x 3 1/4

We also stock: 1X In MDF, Particle Board, Poplar, S4S, Windsor One, Hinges & Thresholds

JMI

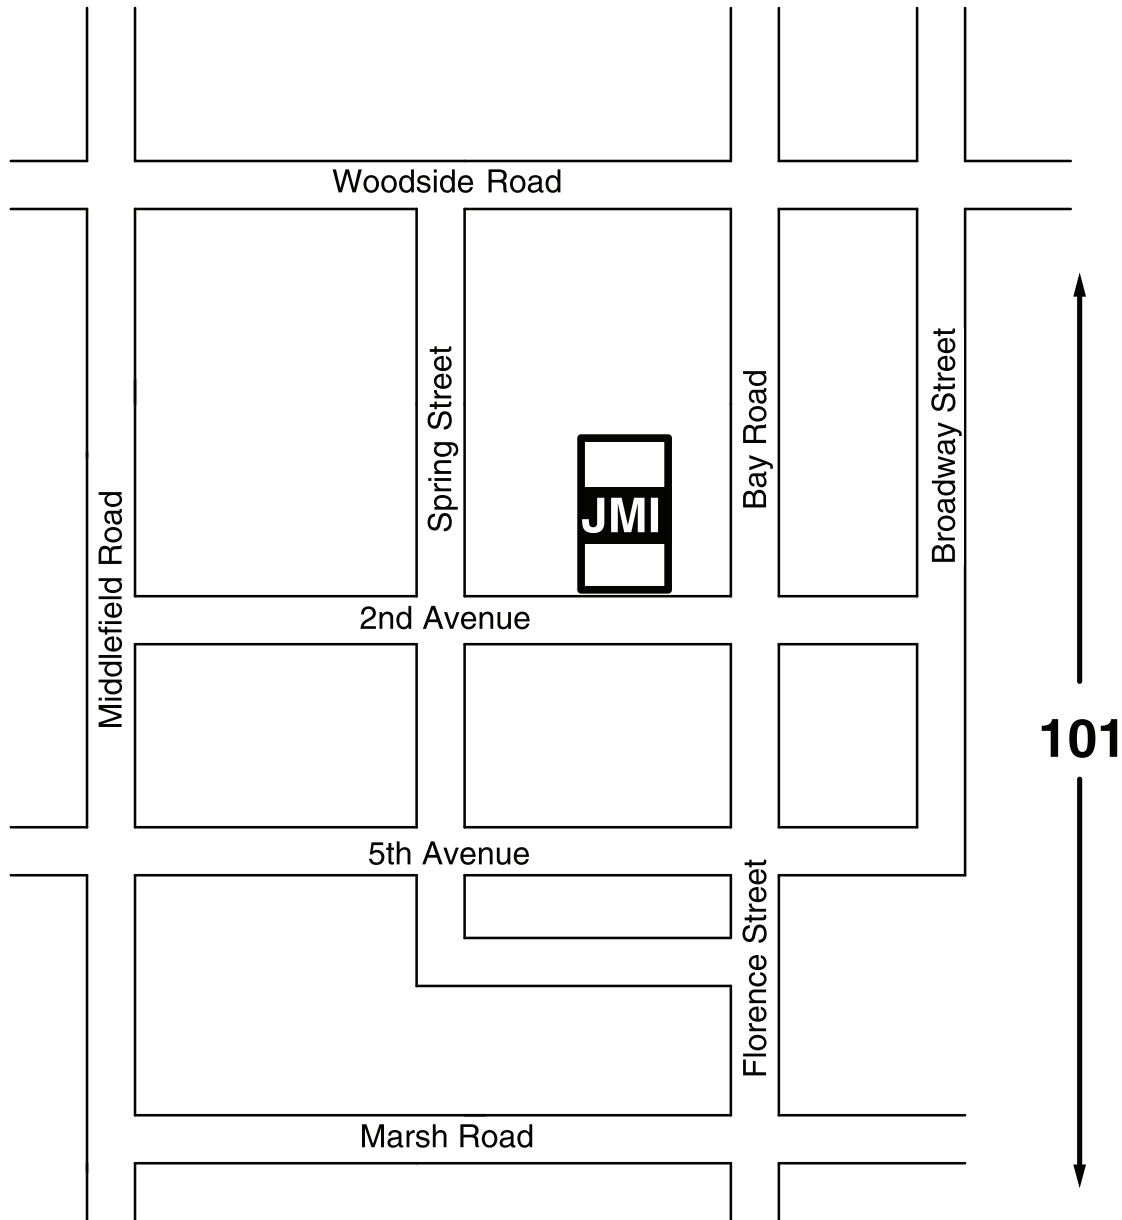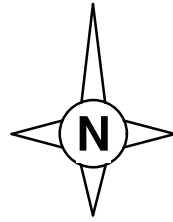

837 SECOND AVENUE
REDWOOD CITY, CA 94063

PHONE 650-361-1775
FAX 650-361-1802